

NEWLY AVAILABLE IN OUR ASSORTMENT

MOUNTING TOOL SAF COMPACT BEARING

MOUNTING TOOL BEARING RACE AND EXCITER RING



Mounting tool for assembly of:
- outer bearing races
- exciter rings

For axle type:

SK RB 9022KI (01), SK RB 9019KI
SK RB 9019WI, SK RB 9022WI
B(I)9-19K, B(I)9-19W, B(I)9-22K01,
B(I)9-22W (-6), BA9-22K01

Article N°:
1 434 3321 00

MOUNTING TOOL SEAL



Mounting tool for assembly of:
- Seals -outer-
- Seals -inner-

For axle type:

SK RB 9022KI (01), SK RB 9019KI
SK RB 9019WI, SK RB 9022WI
B(I)9-19K, B(I)9-19W, B(I)9-22K01,
B(I)9-22W (-6), BA9-22K01

Article N°:
1 434 3322 00



CAUTION:

For professional and proper assembly of SAF compact bearings both mounting tools are necessary.

IMPORTANT NOTICE:

Maintenance work has always to be carried out by trained personnel only!
Please do always follow SAF instructions for repair and maintenance!

SAF-HOLLAND GmbH

Geschäftsbereich Aftermarket · Hauptstraße 26 · 63856 Bessenbach · Germany · Tel +49 6095 301-301

www.safholland.com